


POSTER 05

Sealing a borehole with a sanitary seal

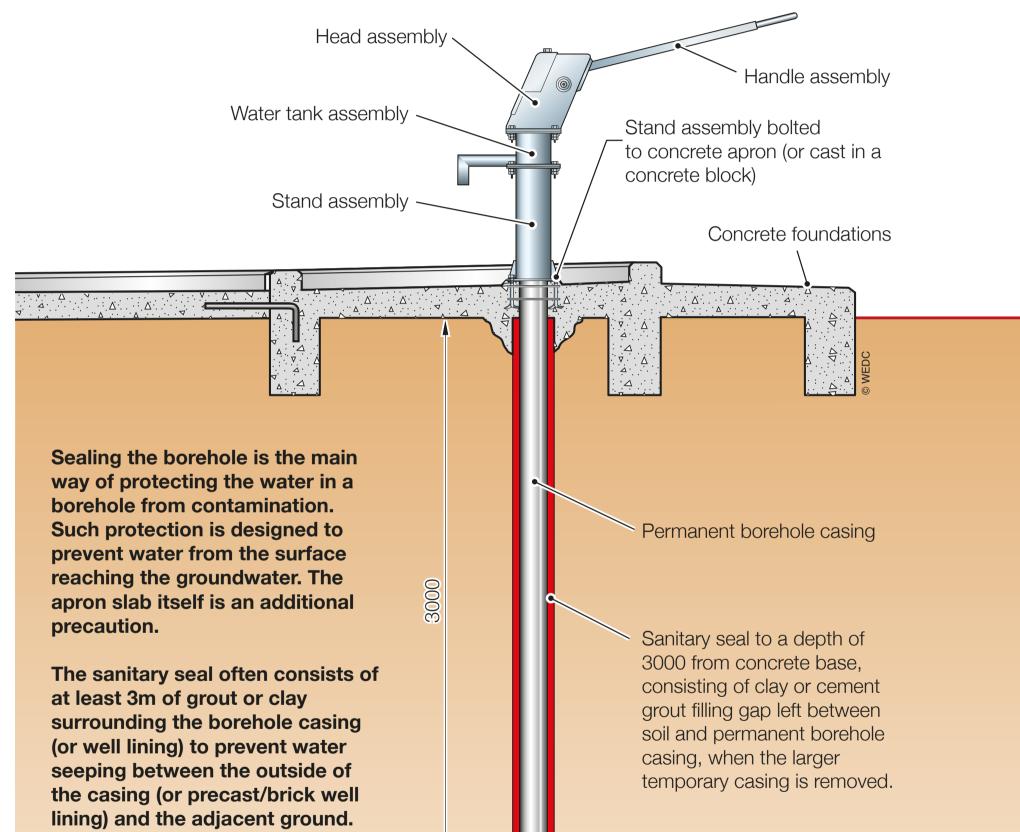

The seal should be installed when the borehole is constructed.

Remaining gap left below filled with other suitable fine material

All dimensions in millimeters

Source: SKINNER, B. H. 2012. An engineer's guide to apron slabs for water points: WEDC Booklet No. 3. Loughborough, UK: WEDC, Loughborough University

For further information visit: http://wedc-knowledge.lboro.ac.uk/

